












## Installing the lockable lid (continued)

Fit the lock tongue as shown

Fit the small washer and M6 nut over the lock tongue and tighten. **DO NOT OVER TIGHTEN** to avoid stripping the thread.

Turn the Lockable Lid right way up. The keyway should be pointing to the left and the lock tongue pointing out from the lid. This is the 'locked' position.

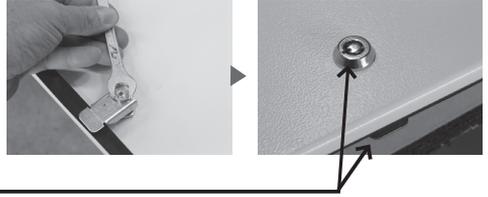

Test the locking mechanism by inserting the key and turning in a clockwise direction. This is the unlocked position. The lid can now be fitted to the trolley by sliding the non-lock end into the bracket at the end of the trolley top and lowering the lock end of the lid onto the bracket.

## Install the Security Chain Kit

Tools required:

- > Masonry hammer-drill
- > 10mm masonry drill bit
- > Pencil and ruler/tape
- > Hammer
- > 13mm and 17mm spanners
- > The Lock 'n' Charge 'RR Security Chain Kit' containing the following:
  - 1 x 3 holed Anchor Plate and security chain
  - 3 x 55mm long, 8mm Anchor Bolts
  - 3 x Shear Nuts and washers
  - 1 x BSD Lock and key set

Wheel your PCLocs RR Trolley to the location in which you intend to store and secure it. Ensure that the trolley (and chain) will reach the intended Floor Plate location. It is best if the Floor Plate is located as close as possible to a vertical wall to reduce the hazard of personal injury. Insert the pin end of the chain in the trolley and position the plate end in the desired position on the floor. **NOTE: If mounting on carpet you will need to cut out the carpet from the area where the floor plate attaches**

Mark the centre of each of the 3 holes.

Drill a 10mm hole through each of the 3 marked centres to a depth of 50mm, using the floor plate as a guide.




Insert the anchor bolts with nut attached into the holes through the floor plate. Using the 13 mm spanner, progressively tighten down each of these anchor nuts so that all three bolts are firmly anchored into the concrete.

Now undo each of the three nuts, and in their place thread on the three silver shear-nuts. Ensure that the 'cone' is down and the hexagonal nut is up. Using the 17mm spanner tighten down the three shear nuts until the hexagonal 'head' shears off, leaving just the cone 'base'.

## Installing the Security Chain Kit (continued)

Slide the security pin through the hole in the Leg of the RR Trolley and secure the pin using the Lock 'n' Charge padlock.

The trolley is now secured and should be secured in this way at the end of every school day.

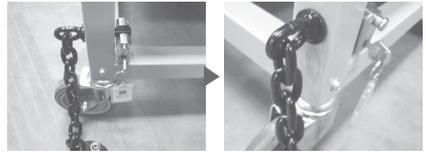

## Fitting Instructions for Weather Cover

Using the Allen Key loosen the bolts that secure the coloured cleat. Remove one bolt completely.

Cleat



Bolt (inside trolley)



Loosen Bolts



Slide the sleeve on the rear of the Weather Cover bag over the cleat.

Re-secure the cleat using the small bolts.



Unzip the bag and install the Weather Cover bag over the Trolley Frame.

**NOTE:** It is recommended the Weather Cover be rolled up and packed into the bag when the laptops are being charged in the trolley.



## Congratulations!

Your Revolution Range® ECO Laptop Trolley is now ready for use.

For charging purposes read the instructions of how to use the ECO Safe Charge Power board.

## Warranty

PC Locs/LocknCharge warrants the product to be free of defects in design, materials, assembly and craftsmanship for a period of twelve months from the date of purchase to the original retail purchaser. Evidence of original purchase will be required to obtain warranty service.

In the event that a defect, malfunction or failure occurs or is discovered during the warranty period, PC Locs/LocknCharge will repair or replace, at its option, the products which in the reasonable judgment of PC Locs/LocknCharge are deemed defective. All transportation costs shall be borne by the owner and the risk of loss shall be upon the party initiating the transportation.

The warranty does not apply to any product that has been subject to misuse, tampering, neglect, or accident or as a result of unauthorized alterations or repairs to the product. The warranty is in lieu of all warranties expressed or implied, including the implied warranties of merchantability and fitness for a particular purpose which are expressly excluded or disclaimed. In no event will PC Locs/LocknCharge, their directors, officers, employees, or agents be liable for any harm, consequential, incidental, third party, special or indirect damages whatsoever arising out of the use or inability to use the products even if PC Locs/LocknCharge has been advised of the possibility of such damages. PC Locs/LocknCharge obligation is strictly and exclusively limited to the replacement or repair of any defective products. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

## Compliances and Approvals

